

# TP5700/TP5800/TP5900G JUMPER SETTING

## **JP2 : TOUCH SIGNAL SELECT**

Pin 1-3 , 2-4 Short : COM4 Signal

Pin 3-5 , 4-6 Short : USB Signal (Reserved)

## **JP4 : PS2 MOUSE SIGNAL LOOP**

Short :

All Open : Default

## **JP6 : 12V DC SUPPLY SELECT FOR CRT**

Short : 12V DC

Open : AC

## **JP9 : LAN FUNCTION SELECT**

Short : Enable

Open : Disable

## **JP11 : CMOS DATA CONTROL**

Pin 1-2 Short : Clear CMOS

Pin 2-3 Short : Normal

## **JP12 : Reserved**

always short

## **JP13 : COM1/COM2 DC SUPPLY SELECT**

Pin 1-3 Short : COM1 Pin9 connected to 5 V DC

Pin 3-5 Short : COM1 Pin9 connected as RI

Pin 2-4 Short : COM2 Pin9 connected to 5 V DC

Pin 4-6 Short : COM2 Pin9 connected as RI

## **JP14 : COM3/COM4 DC SUPPLY SELECT**

Pin 1-3 Short : COM3 Pin9 connected to 5 V DC

Pin 3-5 Short : COM3 Pin9 connected as RI

Pin 2-4 Short : COM4 Pin9 connected to 5 V DC

Pin 4-6 Short : COM4 Pin9 connected as RI

## **JP16 : SOFTWARE AWARENESS OF UPS STATUS**

Pin 1-2 Short : Normal (DCD signal)

Pin 2-3 Short : Detect UPS status

## **JP34 : MX scale IC use**

Pin 1-2 , 3-4 Short : Use TP076/TP077

All Open : Use TP056/TP057/TP066/TP067

