

INSTALLATION GUIDE FOR WALL MOUNT KIT OF PP-8000 SERIES

Rev. Original

KIT PART NUMBER: 39776001010

KIT CONTENT (Besides this guide):

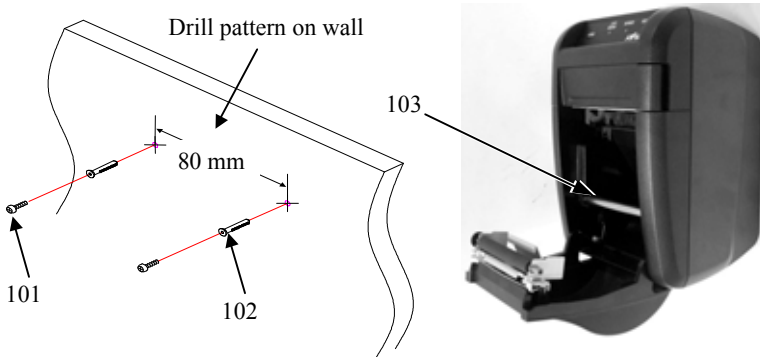


Fig-1 Kit content besides this guide (Printer not included)

ITEM	PART NUMBER	DESCRIPTION	Q'TY
101	10642035162	Self Tapping Screw 3.5φ-16L	2
102	10241000021	Plastic Plug	2
103	19770201010	Paper Roll Shaft	1


KIT APPLICATION: This kit can be used to hang Posiflex thermal POS printer PP-8000 series for wall-mount application

INSTALLATION

1. Please first determine a suitable area on a rigid wall surface to support firmly the weight of the printer for its wall mount application. In this area, the environmental condition should be adequate for a reliable service of the printer. Considerations include sufficient ventilation and effectively protected against unwanted contamination. Keep the printer away from direct sunshine, excessive heat or moisture. Please then follow the


preparation procedures described below. Drill 2 holes 3.15" or 80 mm apart at same height on the rigid wall. Hole diameter should be 1/4" or 6.35 mm each. Hole depth should be at least 1 and 3/16" or 30 mm. Please then insert one plastic plug into each hole leaving the flat end with hole of the plastic plug at the outside opening of the hole on wall. Use a hammer to tap the plastic plug in gently if necessary. Insert the attached screws into the plastic cotter and screw in but leaving about 7 mm or 9/32" of screw neck exposed from wall surface. These 2 screws will then be used for hanging the printer.

2. Please note that on bottom of the printer, there are 2 holes 80 mm apart for hanging the printer over the screws on wall as indicated in the upper right picture. Hang the printer onto the wall with the 2 screw heads going into these 2 holes.

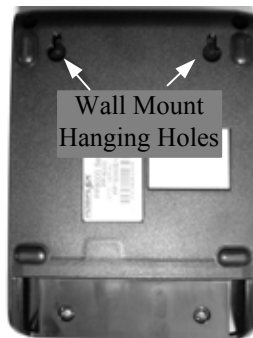

3. Now, push the hood release button of the printer, the hood will now fully open. Insert the paper roll shaft in the paper roll and put the whole paper roll inside the printer into the guides on both sides till it holds in position for wall mount application as indicated in lower right picture. Close the hood and tear off the excessive paper.

Paper
Roll
Shaft

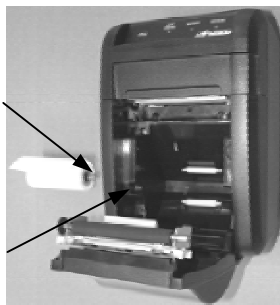

Guide

4. To prevent any confusion as a result from different paper roll position in wall mount application, please change in service window DIP switch 1 position 5 to ON. So that the printer won't respond to host as "busy" just by paper near end signal caused by this position change. Of course you may also leave this setting unchanged and do the sensor position adjust carefully for the specific paper roll used particularly for wall mount application according to the User's Manual of PP-8000 series.
5. Please make all necessary cable connections to the printer, then the printer is ready for wall mount operation.